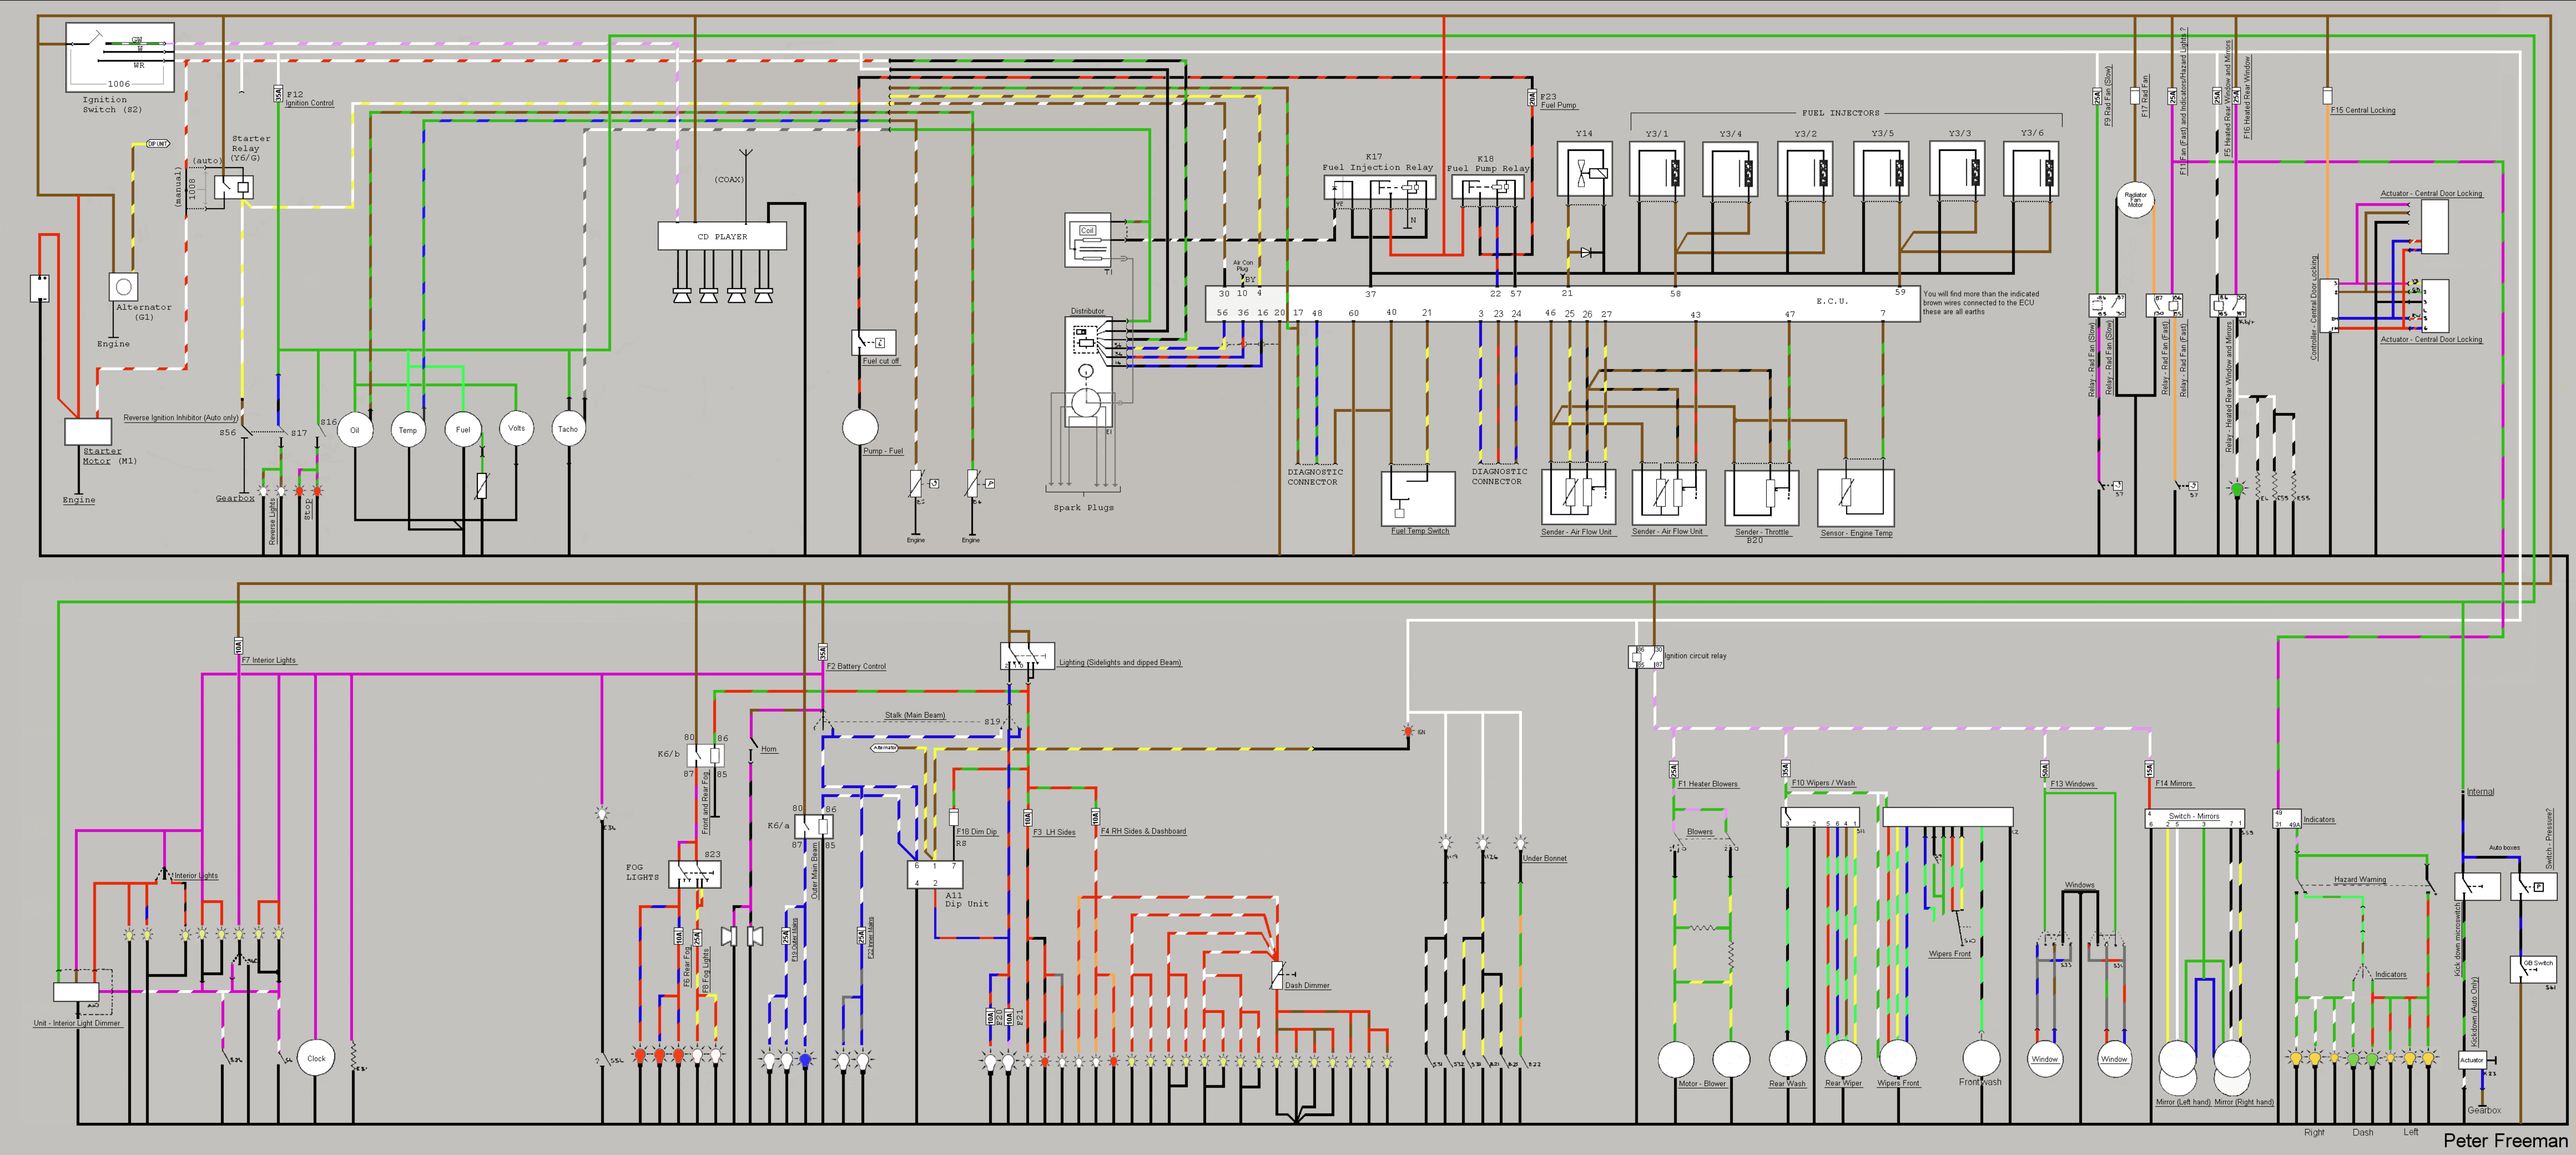
Ignition Switch (82)
1006
F12 Ignition Control
Starter Relay (Y6/G)
(auto)
(manual)
1008
CD PLAYER
(COAX)
Alternator (G1)
Engine
Starter Motor (M1)
Reverse Ignition Inhibitor (Auto only)
856
817
816
Oil
Temp
Fuel
Volts
Tacho
Gearbox
Reverse Lights
Stop
Fuel cut off
Pump - Fuel
Coil
Distributor
Spark Plugs
Air Con Plug
K17 Fuel Injection Relay
K18 Fuel Pump Relay
F23 Fuel Pump
FUEL INJECTORS
Y14
Y3/1
Y3/4
Y3/2
Y3/5
Y3/3
Y3/6
E.C.U.
You will find more than the indicated brown wires connected to the ECU these are all earths
DIAGNOSTIC CONNECTOR
DIAGNOSTIC CONNECTOR
Fuel Temp Switch
Sender - Air Flow Unit
Sender - Air Flow Unit
Sender - Throttle B20
Sensor - Engine Temp
F9 Cond Fan (Slow)
F17 Rad Fan
F10 Fan (Fast) and Horn/Hazard Light 2
F5 Heated Rear Window and Mirrors
F16 Heated Rear Window
F15 Central Locking
Radiator Fan Motor
Relay - Rad Fan (Slow)
Relay - Rad Fan (Slow)
Relay - Rad Fan (Fast)
Relay - Rad Fan (Fast)
Relay - Heated Rear Window and Mirrors
Controller - Central Door Locking
Actuator - Central Door Locking
Actuator - Central Door Locking
F7 Interior Lights
Interior Lights
Unit - Interior Light Dimmer
Clock
F2 Battery Control
Lighting (Sidelights and dipped Beam)
Stalk (Main Beam)
Alternate
K6/b
K6/a
Horn
Front and Rear Fog
Outer Main Beam
FOG LIGHTS
F18 Dim Dip
A11 Dip Unit
F3 LH Sides
F4 RH Sides & Dashboard
Dash Dimmer
F8 Rear Fog
F8 Fog Lights
F11 Main Beam
Cockpit Lights
Under Bonnet
Ignition circuit relay
F1 Heater Blowers
Blowers
Motor - Blower
F10 Wipers / Wash
Rear Wash
Rear Wiper
Wipers Front
Front Wash
F13 Windows
Windows
Window
Window
F14 Mirrors
Switch - Mirrors
Mirror (Left hand)
Mirror (Right hand)
Indicators
Hazard Warning
Indicators
Internal
Auto boxes
Kick down microswitch
Kickdown (Auto Only)
Actuator
Gearbox
Switch - Pressure?
O/D Switch
Right
Dash
Left
Peter Freeman